

Priručnik za korisnike
User Guide

1. Naziv i komponente svakog dijela



Tipka (svjetlo stanja)

Stanje punjenja lil SOLID™ uređaja prikazuje se pritiskom na tipku ili nakon što je uređaj uključen u utičnicu preko priključka za punjenje.

Svjetlo stanja je upaljeno kada se uređaj puni.

- Svjetlo stanja treperi kada se uređaj puni.
- Svjetlo stanja svijetlit će u plavoj boji nakon što se uređaj napuni do kraja.

Plavo 100~75%
Svjetloplavo 75~35%
Narančasto 35~1%
Crveno potrebno je punjenje

* Zbog prirode dijelova od kojih se sastoji svjetlo stanja, svjetlina i boja svjetla mogu se neznatno razlikovati.


Priključak za punjenje

- Prije prve upotrebe napunite lil SOLID uređaj.
- Potrebna su oko dva sata da bi se uređaj napunio do kraja, jedno punjenje dovoljno je za oko 25 umetaka (broj umetaka može se razlikovati ovisno o uvjetima u kojima se uređaj upotrebljava).

⚠ Uređaj upotrebljavajte samo s USB kabelom i adapterom za napajanje za lil™ koji su isporučeni uz uređaj.

⚠ Uređaj možete puniti kad god želite bez obzira na stanje napunjenosti baterije.

2. Sadržaj kutije

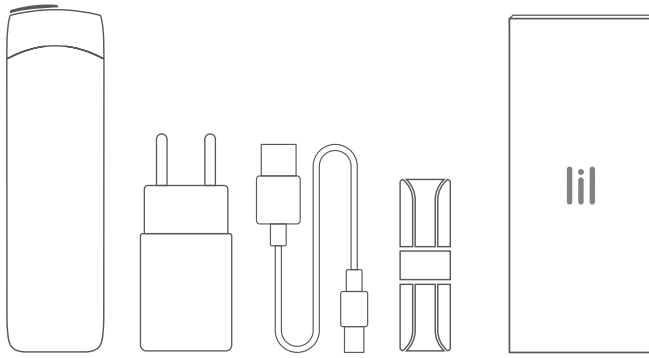

lil SOLID Ez™ uređaj | Adapter za napajanje | USB kabel | Dvojni čistač | **Komplet za korisnike** (Priručnik za korisnike, Sigurnosna upozorenja i upute te Komercijalno jamstvo)

3. Sigurnosna upozorenja i upute

Da biste uređajem rukovali na siguran i ispravan način, prije upotrebe pažljivo pročitajte upute u Priručniku za korisnike.

Sigurnosna upozorenja i upute uključene u ovaj dokument ne mogu obuhvatiti sve moguće uvjete i situacije koje se mogu dogoditi u tijeku upotrebe uređaja. Elektronički proizvodi moraju se upotrebljavati i održavati

s oprezom i pažnjom.

Ova sigurnosna upozorenja i upute sadržavaju važne informacije, stoga ih sačuvajte kako biste ih mogli pogledati i u budućnosti.

⚠ Ako ne slijedite upute, može doći do ozljeda.

Elektronički lil SOLID Ez uređaj i baterija

- Ne upotrebljavajte uređaj bez poklopca i ne pokušavajte dodirnuti vrh grijane igle.
- Pazite da uređaj ne padne u vodu.

- Proizvod ne sadržava dijelove koje korisnik može popraviti sam. Ne pokušavajte otvarati, prilagođavati, rastavljati ili popravljati bateriju ili bilo koji dio uređaja.
- Ako uređaj izgleda kao da je oštećen, prilagođavan, rastavljen, uronjen u tekućinu ili kao da se njime neovlašteno rukovalo, ne upotrebljavajte ga.
- Ne dirajte uređaj, adapter za napajanje i USB kabel ako se pregrijavaju, dime, zapale, iskre ili gore.
- Ne upotrebljavajte uređaj ako je bio izložen prekomjernoj toplini.
- Ne povezujte uređaj kroz električne žice ili druge metalne materijale jer može doći do oštećenja.

- Ne upotrebljavajte uređaj u blizini zapaljivih materijala, tekućina ili plinova ili u uvjetima visoke razine kisika. Postoji opasnost od eksplozije.
- Uređaj, adapter za napajanje i USB kabel ne smiju se izlagati tekućinama, uljima, otapalima itd. Ne dirajte uređaj ili njegove dijelove ako je mokar ili je bio uronjen u tekućine, ulja, otapala itd.
- Ne čistite uređaj tekućinama, uljima, otapalima itd.
- Pazite da strana tijela ne uđu u otvor za umetak. Ne upotrebljavajte uređaj dok nisu uklonjene sve strane čestice.
- Ako bilo kakva tekućina koja curi iz uređaja dođe u dodir s kožom, operite zahvaćeno područje,

uključujući ruke, i ne dirajte oči. U slučaju da tekućina dođe u doticaj s očima, smjesta ih isperite čistom tekućom vodom barem 15 minuta i odmah potražite liječničku pomoć.

- Ne upotrebljavajte uređaj ako baterija curi.
- Uređaj upotrebljavajte samo s USB kabelom i adapterom za napajanje za lil. Pogledajte odjeljak Tehnički podaci ovih Uputa za korisnike za odobrene adaptere za napajanje. Ne upotrebljavajte druge kabele i adaptere jer može doći do oštećenja.
- Uređaj punite isključivo samo u zatvorenim prostorima, kako je naznačeno simbolom ⌂.

Upotreba i čuvanje

- Upotrebljavajte isključivo duhanske umetke za grijanje posebno dizajnirane za Iil SOLID uređaj. Ne možemo jamčiti učinkovitost uređaja ako ga upotrebljavate s drugim proizvodima.
- Nemojte ni na koji način preinačivati duhanske umetke za grijanje i nemojte dodavati nikakvu tvar u duhanske umetke za grijanje koji su namijenjeni za Iil SOLID uređaj. To može izazvati nastanak ozljeda.
- Uređaj, USB kabel, adapter i duhanske umetke za grijanje uvijek držite izvan dohvata djece i kućnih ljubimaca. Oprez: sadržavaju dijelove koje djeca mogu progutati.
- Iil SOLID smiju upotrebljavati

samo punoljetne osobe. Djeca i adolescenti nikada i ni pod kojim okolnostima ne smiju upotrebljavati lil SOLID.

- Uređaj i duhanski umetci za grijanje ne smiju se prodavati maloljetnim osobama.
- Uređaj i duhanski umetci namijenjeni su trenutnim punoljetnim pušačima koji bi inače nastavili pušiti.
- Ne skidajte poklopac u tijeku ili odmah nakon upotrebe uređaja jer može biti vruć. Ostavite uređaj da se ohladi prije skidanja poklopca.
- Grijanje se nastavlja čak i ako uklonite duhanski umetak za grijanje u tijeku upotrebe. Zaustavite grijanje pritiskom na tipku na dvije sekunde.

- Uređaj očistite nakon što se ohladi.
- Koristite samo alat za čišćenje dizajniran za lil SOLID. Korištenje drugih alata za čišćenje može dovesti do oštećenja.
- Nakon uklanjanja duhanskog umetka za grijanje iz uređaja ne dirajte duhanski dio umetka jer je i dalje vruć.
- Pažljivo rukujte uređajem. Pazite da vam uređaj ne padne i ne izlažite ga udarcima.
- Čuvanjem uređaja na mjestima s visokim temperaturama (primjerice, u vozilu ili u blizini izvora topline poput radijatora ili vatre), s visokom razinom vlažnosti ili na niskim temperaturama može se smanjiti učinkovitost baterije.

- Baterija će oslabjeti ako se ne upotrebljava dulje vrijeme. Napunite uređaj prije ponovne upotrebe.
- Preporučeno korištenje uređaja je na okolišnim temperaturama između 0 °C i 40 °C.
- Duhanski umetci za grijanje posebno dizajnirani za Iil SOLID uređaj namijenjeni su za jednokratnu upotrebu. Ne umećite iskorišteni umetak u uređaj. Ne možemo jamčiti učinkovitost uređaja ako se upotrebljava s već iskorištenim umetkom.
- Duhanski umetak za grijanje ne smije se paliti šibicama, upaljačem ili bilo kojim drugim izvorom plamena.
- Duhanski umetci za grijanje mogu imati mrlje

ili promijeniti boju nakon uobičajene upotrebe.

- Ne stavljajte uređaj u usta.
- Ne upotrebljavajte uređaj na mjestima gdje je zabranjena upotreba elektroničkih uređaja.
- lil SOLID ne smiju upotrebljavati osobe smanjenih fizičkih, senzornih ili mentalnih sposobnosti ili osobe kojima nedostaje iskustva i znanja, osim ako su pod nadzorom ili su dobile upute za upotrebu proizvoda na siguran način i ako shvaćaju uključene rizike.
- Vanjski dijelovi uređaja mogu promijeniti boju zbog čestog izlaganja znoju, UV zrakama i kemikalijama.
- Magnetsko polje u blizini uređaja može prouzročiti kvar.

Duhan i nikotin

- Duhanski umetci za grijanje sadržavaju nikotin koji izaziva ovisnost. Nikotin je prirodno prisutan u duhanu koji se upotrebljava u duhanskim umetcima.
- Gutanje duhanskih umetaka za grijanje može prouzročiti trovanje nikotinom. U slučaju gutanja duhanskih umetaka za grijanje odmah potražite liječničku pomoć.
- Najbolji način smanjivanja zdravstvenih rizika povezanih s duhanom jest potpuni prestanak upotrebe duhana i nikotina.
- Nakon prestanka pušenja cigareta ili prelaska na druge nikotinske proizvode možda će biti potrebno prilagoditi doziranje određenih lijekova (npr.

teofilin, klozapin, ropinirol).

- Upotreba duhanskih umetaka za grijanje može izazvati nuspojave kao što su glavobolja, mučnina, iritacija grla ili stomatitis. Ako osjetite neki od simptoma, odmah prekinite upotrebu proizvoda.
- Ako ste trudni, dojite ili mislite da biste mogli biti trudni, imate srčane bolesti, dijabetes, epilepsiju, napadaje ili druga ozbiljna zdravstvena stanja, trebate u potpunosti prestati konzumirati duhan i nikotin te razgovarati s liječnikom.
- Upotreba duhanskih umetaka za grijanje može izazvati alergijsku reakciju. Odmah potražite liječničku pomoć ako osjetite bilo

koji od sljedećih simptoma: oticanje lica, usana, jezika itd. i/ili otežano disanje.

⚠ OPREZ
<Rizik od opeklina>

Nepridržavanje ovih sigurnosnih upozorenja i uputa može dovesti do nastanka opeklina od toplinskog izvora:

- Čuvajte lil SOLID i duhanske umetke za grijanje osmišljene za lil SOLID na čistom, suhom i hladnom mjestu.
- Ne izlažite lil SOLID i duhanske umetke za grijanje osmišljene za lil SOLID visokoj vlazi ili izravnoj sunčevoj svjetlosti.
- Ne upotrebljavajte duhanske umetke za grijanje osmišljene za lil SOLID koji


su bili izloženi prekomjernoj toplini ili vlazi.
- Ne uklanjajte duhanski umetak za grijanje osmišljen za Iil SOLID dok je u upotrebi.

Prijavljivanje štetnih događaja ili incidenata


- Ako pri upotrebi uređaja osjetite bilo kakav neželjeni učinak na zdravlje, posavjetujte se sa zdravstvenim stručnjakom.
- Bilo kakav štetni događaj ili incident možete prijaviti izravno lokalnoj Službi za korisnike na 0800 9153.
- Prijavom nuspojava možete pomoći u prikupljanju više informacija o sigurnosti proizvoda.

4. Upotreba


1 Prije upotrebe

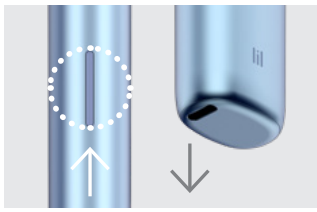

Iil SOLID uređaj u stanju je mirovanja i neće raditi dok ga ne pokrenete prvi put.
Za uključivanje uređaja pritisnite tipku na dvije sekunde ili spojite USB kabel na priključak za punjenje.

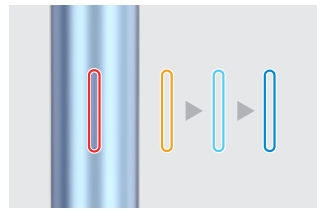

Svjetlo stanja zatreperit će dva puta crvenom, narančastom, svjetloplavom i plavom bojom (tim redoslijedom) nakon uključivanja uređaja.

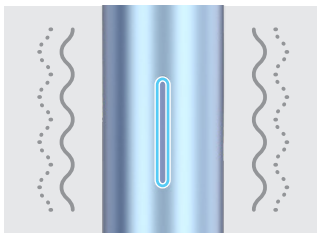

Jednom kad se uređaj uključi, svjetlo stanja zatreperit će svjetloplavom bojom na jednu sekundu uz dvije uzastopne vibracije.


Uređaj će se vratiti u stanje mirovanja radi očuvanja baterije:

① Ako ga ne napunite 24 sata, a upaljeno je crveno svjetlo stanja.

② Ako ga ne upotrijebite sedam dana, a upaljeno je narančasto, svjetloplavo ili plavo svjetlo stanja.




Uzmite uređaj. Povucite i otvorite zatvarač na vrhu uređaja.

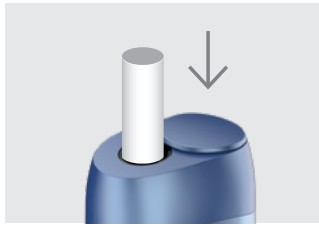


Umetnite duhanski umetak za grijanje dizajniran za lil SOLID u otvor za umetak tako da je duhanski dio umetka okrenut prema dolje. Duhanski umetak treba dotaknuti dno otvora za umetke.

- Ako umetak okrenete naopačke, uređaj bi se mogao pokvariti u tijeku upotrebe. Stoga prije upotrebe provjerite je li umetak okrenut na ispravnu stranu.
- Zatvorite zatvarač kad ne upotrebljavate uređaj kako biste spriječili da prljavština uđe u uređaj.

2 Pokretanje uređaja

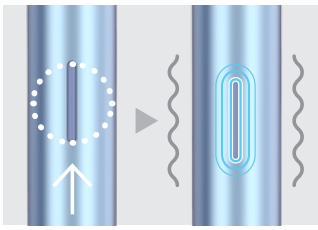


Pritisnite tipku na dvije sekunde dok ne osjetite vibraciju. Nakon dvije sekunde svjetlo stanja zatreperit će u svjetloplavoj boji uz istodobnu vibraciju. Zagrijavanje će trajati približno 25 sekundi.
Vrijeme zagrijavanja može ovisiti o okolini u kojoj se koristi uređaj.

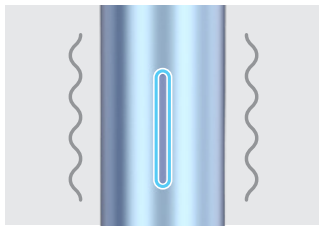


Nakon završetka zagrijavanja uključit će se svjetlo stanja uz istodobnu vibraciju. To znači da je zagrijavanje završilo i da je umetak spreman za upotrebu.


3 Upotreba

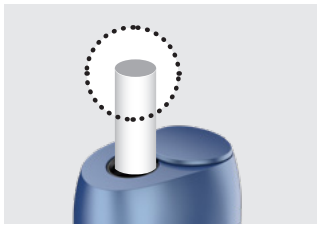

Uređaj s duhanskim umetkom za grijanje spreman je za upotrebu. Imate na raspolaganju 14 udisaja ili pet minuta, ovisno o tome što nastupi prije.

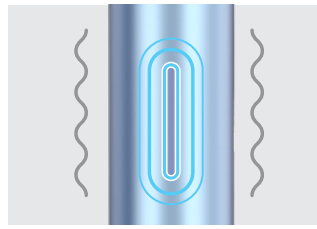

Uređaj će zavibrirati jedanput, a svjetlo stanja treperit će u svjetloplavoj boji sve do kraja sesije kao znak da je preostalo još 30 sekundi ili tri udisaja, ovisno o tome što nastupi prije.

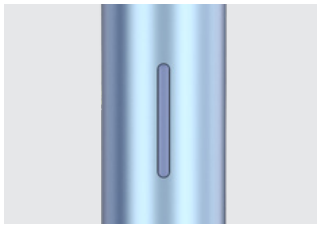


Na kraju sesije, svjetlo stanja automatski će se isključiti. Nije potrebno pritisnuti tipku.

Pritisnite tipku na dvije sekunde i uklonite duhanski umetak samo ako želite prekinuti sesiju i upotrebu uređaja.

4 Uklanjanje duhanskog umetka za grijanje



Okrenite umetak u jednom smjeru tri ili više puta.

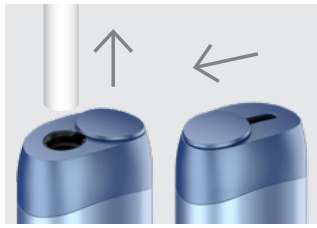

Izvucite umetak iz uređaja. Zatvorite zatvarač.


Ako ne uklonite umetak na gore opisani način, u uređaju mogu ostati tragovi umetka.
Ako se u otvoru za umetak nalaze zaostali tragovi umetka, pogledajte točku **1** u 6. poglavlju: Rješavanje problema.

5 Uzastopna upotreba


U slučaju uzastopne upotrebe ponovite korake **1** do **4**.
Uređaj se može upotrijebiti tri puta uzastopno.

5. Čišćenje i rukovanje


1 Čišćenje dvojnim čistačem

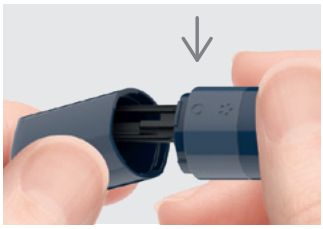


Uzmite dvojni čistač. Za upotrebu brisača nježno otvorite dvojni čistač na strani na kojoj je prikazano ⦿.

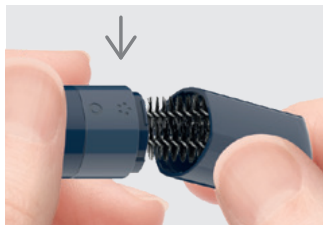

Za upotrebu četkice nježno otvorite dvojni čistač na strani na kojoj je prikazano ⁘.

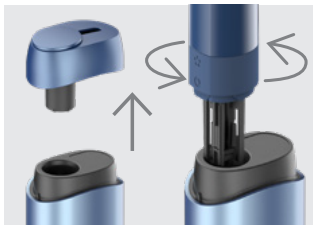


Skinite poklopac s uređaja. Umetnite brisač u uređaj i okrećite ga kako biste očistili uređaj.

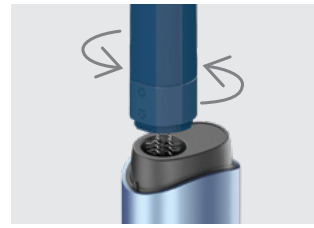


Umetnite četkicu u uređaj i okrećite je kako biste očistili uređaj.

- Da bi uređaj optimalno radio, preporučujemo njegovo čišćenje nakon upotrebe 20 umetaka.
- Ne čistite uređaj u tijeku grijanja ili odmah nakon upotrebe. Ostavite uređaj da se ohladi, inače se brisač ili četkica mogu rastopiti i zalijepiti za uređaj.
- Pazite da četkica ili brisač ne dođu u dodir s tekućinama, uljima, otapalima itd.
- Pazite da četkica ili brisač ne dođu u dodir s očima.
- Držite četkicu ili brisač dalje od vatre.
- Pažljivo rukujte četkicom ili brisačem jer mogu biti oštri.
- Upotrebom drugih alata za čišćenje osim četkice ili brisača ili primjenom grube sile možete oštetiti grijač.

2 Čišćenje toplinom

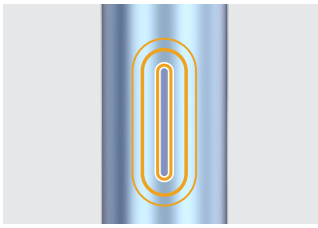

Kratko pritisnite tipku pet puta (unutar dvije sekunde). Svjetlo stanja treperit će u narančastoj boji 90 sekundi, a postupak čišćenja počet će automatski.

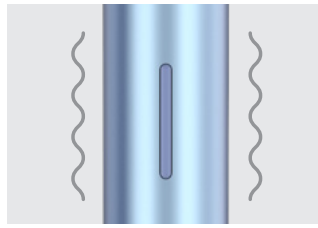

Nakon završetka čišćenja svjetlo stanja automatski će se isključiti uz dvije uzastopne vibracije.

* Čišćenje toplinom podrazumijeva grijanje ostataka koji su se zalijepili na grijač. Grijač se može jako zagrijati, stoga pazite da ništa ne dođe u dodir s njim u tijeku čišćenja toplinom ili odmah nakon njegova završetka.

6. Rješavanje problema

1 Ne mogu umetnuti umetak u uređaj.

Ako se u otvoru za umetak nalaze tragovi prethodnog umetka, novi umetak se ne smije umetnuti. Uklonite tragove skidanjem poklopca i ponovno pokušajte umetnuti duhanski umetak.




Provjerite ima li zaostalih tragova u otvoru za umetak. Ako vidite tragove umetka, skinite poklopac s uređaja.




Uklonite tragove s poklopca.


2 Uređaj ne radi.

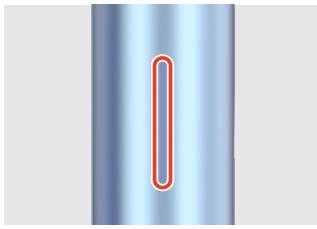

Svjetlo stanja svijetli crvenom bojom 3 sekunde dok uređaj istodobno vibrira 2 puta.
Nedovoljno napunjena baterija.
→ Napunite uređaj.

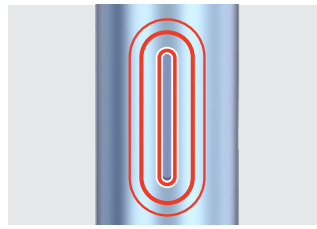


Svjetlo stanja treperi u crvenoj boji pet puta.
Uređaj je u kvaru.
→ Resetirajte uređaj.

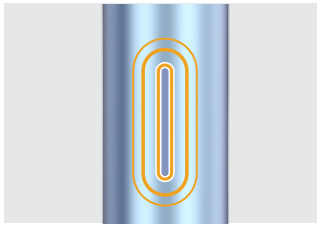


Svjetlo stanja treperi u narančastoj boji tri sekunde. Nakon tri uzastopne upotrebe uređaj će se automatski početi hladiti.
→ Pričekajte dok se temperatura uređaja ne ustali.

* Zbog vaše sigurnosti uređaj se može upotrijebiti najviše tri puta u 18 minuta jer se mora ohladiti. Pričekajte tri minute i 30 sekundi prije ponovne upotrebe.


3 Kako mogu resetirati uređaj?

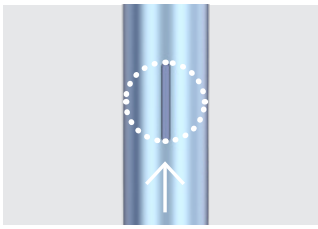

Pritisnite i držite tipku osam sekundi, čak i ako nakon dvije sekunde osjetite vibraciju.

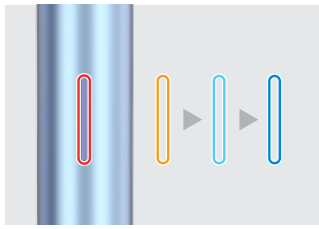

Uređaj se resetirao, a svjetlo stanja zatreperit će dva puta crvenom, narančastom, svjetloplavom i plavom bojom (tim redoslijedom).

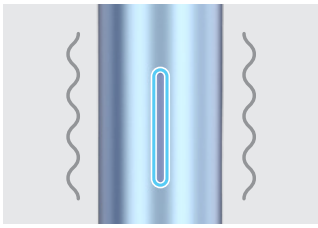

Nakon završetka resetiranja, svjetlo stanja zatreperit će svjetloplavom bojom na jednu sekundu uz dvije uzastopne vibracije.

4 Umetak prekratko traje.

Uređaj je dizajniran za isporuku 14 udisaja ili pet minuta, ovisno o tome što nastupi prije.
Jamstveni rok za uređaj iznosi jednu godinu, pod uvjetima opisanima u jamstvu.

7. Zbrinjavanje

Ovaj simbol na proizvodu ili pakiranju označava da se ovaj proizvod i njegovi dijelovi



(uključujući baterije) ne smiju odlagati s ostalim kućanskim otpadom. Umjesto toga, vaša je odgovornost odlagati otpad tako da ga predate ovlaštenom sakupljaču električnog i elektroničkog otpada. Između ostalog, baterije koje su postale otpad mogu se besplatno vratiti i na mjesto prodaje. Odvojeno sakupljanje i recikliranje otpada (uključujući baterije) u vrijeme odlaganja pomoći će u očuvanju prirodnih resursa i omogućiti da se reciklira na način koji štiti ljudsko zdravlje i okoliš. Odlaganje otpada kao nesortiranog komunalnog otpada (npr. spaljivanjem ili zakopavanjem otpada) može imati negativne učinke na okoliš i ljudsko zdravlje.

Za više informacija o tome gdje možete odložiti otpad kako bi se on reciklirao, kontaktirajte svoj mjesni gradski ured, mjesnu službu za odlaganje kućanskog otpada ili trgovinu u kojoj ste kupili proizvod.

8. Komercijalno jamstvo

CENTAR ZA KORISNIČKU PODRŠKU Hrvatska

Besplatni telefon: 0800 9153
Elektronička pošta: contact.hr@iqos.com
Internetska stranica: www.iqos.com/lil
Adresa: Philip Morris Zagreb d.o.o., Heinzelova 70, 10000 Zagreb

Trajanje

- Trajanje komercijalnog jamstva na lil SOLID Ez uređaj, adapter za napajanje i USB kabel je 12 mjeseci od datuma predaje.
- U slučaju izostanka dokaza o kupnji, društvo pridržava pravo na temelju vlastite evidencije

dobrovoljno primijeniti vremensko trajanje komercijalnog jamstva i to počevši od datuma proizvodnje predmetne komponente.

Pokrivenost komercijalnim jamstvom

- Društvo će po svojem izboru (bez utjecaja na vaša zakonom propisana prava) popraviti ili zamijeniti bilo koje dijelove koji su oštećeni u pogledu materijala ili izrade ako se upotrebljavaju u skladu s primjenjivim Priručnikom za korisnike za lil SOLID Ez uređaj i u odnosu na koje je podnesen valjani zahtjev za jamstvo.
- Ako popravak nije moguć, proizvod se zamjenjuje proizvodom jednake funkcionalnosti. U mjeri dopuštenoj zakonom, boja i/ili model zamjenskog proizvoda podložni su dostupnosti te boje i/ili modela. U slučaju zamjene proizvoda pod jamstvom, svaki zamjenski dio postaje vaše vlasništvo, dok zamijenjeni dio postaje vlasništvo trgovačkog društva ili subjekta koji obavlja zamjenu.
- Odredbe ovoga jamstva vrijede samo u državi kupnje.

Izuzeća od jamstva

Proizvodi kojima je isteklo jamstvo ili koji su oštećeni nepažnjom korisnika izuzeti su od jamstva.

Uvjeti ovog jamstva ne primjenjuju se na:

a) oštećenje nastalo redovitim korištenjem
b) površinska oštećenja (poput ogrebotine, udubljenja, slomljene plastike itd.) koja ne utječu na rad proizvoda
c) oštećenje uzrokovano nepravilnim korištenjem, zloupotrebom, nepažnjom, korištenjem u neprikladnim uvjetima, prirodnim katastrofama, strujnim udarom, nepravilnim rukovanjem, kontaktom s tekućinom ili vatrom
d) kvar uzrokovan korištenjem s nekompatibilnim duhanskim umetcima za grijanje, adapterom

za napajanje ili kabelom
e) oštećenje ili kvar uzrokovan pokušajem otvaranja, modificiranja ili popravka bilo od strane korisnika ili tehničkog servisera koji nije ovlašten od proizvođača
f) oštećenje ili kvar uzrokovan korištenjem suprotno opisanom načinu korištenja u lil SOLID Ez Priručniku za korištenje
g) normalno smanjenje učinkovitosti baterije, osim ako se kvar baterije nije dogodio zbog nedostatka u pogledu materijala ili izrade
h) uređaje koji su u potpunosti ili djelomično sastavljeni od neizvornih dijelova
i) gubitak ili krađu proizvoda ili njegovih dijelova.

Korištenje prava iz komercijalnog jamstva

Za korištenje prava iz jamstva obratite se Centru za korisničku podršku na broj naveden niže ili posjetite jedno od naših prodajnih mjesta. Preporučujemo da sa sobom ponesete dokaz kupnje prilikom traženja prava iz jamstva.

Ostalo

Društvo ni pod kojim uvjetima nije odgovorno za bilo kakve osobne zahtjeve ili zahtjeve trećih strana za štete povezane s upotrebom proizvoda osim onih navedenih u ovom dokumentu. Prethodno se ne odnosi na slučajeve u kojima je društvo odgovorno prema zakonu.
Prava koja ostvarujete ovim komercijalnim jamstvom dodatna su prava koja imate uz sva prava i pravne lijekove prema zakonima za zaštitu potrošača u državi kupnje i ni na kakav način ne utječu na njih, uključujući prava koja proizlaze iz odgovornosti za materijalne nedostatke stvari. U državama članicama EU-a kupci imaju na temelju zakona prava koja proizlaze iz odgovornosti za materijalne nedostatke stvari prema prodavatelju besplatno, najmanje dvije godine, a u odnosu na bilo koji nedostatak koji je postojao u trenutku preuzimanja.

9. Tehnički podaci

lil SOLID Ez

Model: S-MONO-V11
Vrsta baterije: Punjiva litij-ionska (Li-ion) baterija
Ulaz: 5,0V ⎓ 2,0A

lil SOLID Ez nosi oznaku [⧐□⧏] i tekst „xx-1007EMTx“, što ukazuje na to da se lil SOLID Ez smije puniti samo uz pomoć odobrenih modela adaptera za napajanje osmišljenih za lil.

Adapter za napajanje
Model: HM-1007EMTE
Ulaz: 100-240V~ 50-60Hz 0,35A
Izlazna performansa:
9,0V ⎓ 1,67A ili 5,0V ⎓ 2,0A
Izlazna snaga: 15,0W ili 10,0W
Prosječna aktivna učinkovitost: 86,15% ili 82,95%
Učinkovitost pri malom opterećenju(10%): 81,05% ili 80,00%
Potrošnja energije bez opterećenja: <0,07 W
Kompatibilan sa svim lil SOLID uređajima

USB kabel
Kompatibilan sa svim lil SOLID uređajima

Dvojni čistač

Da biste saznali mjesec i godinu proizvodnje lil SOLID uređaja, obratite se Centru za korisničku podršku s 14-znamenkastim alfanumeričkim kodom koji se nalazi ispod poklopca.

Uvjeti čuvanja: suha i kondicionirana prostorija, temperaturni raspon: od 5 °C do 30 °C, relativna vlažnost ispod 70%.

Centar za korisničku podršku: 0800 9153

UPUTE ZA UKLANJANJE BATERIJE

(ZA ZBRINJAVANJE I RECIKLIRANJE)

Potrošač ne smije ukloniti bateriju. Na kraju radnog vijeka proizvoda samo subjekti ovlašteni za oporabu smiju ukloniti bateriju slijedeći korake u nastavku.

Model S-MONO-V11

1. korak: Uređaj je prije rastavljanja potrebno u potpunosti isprazniti.
2. korak: Alatom odvojite donju ploču s donje strane uređaja, a zatim uklonite ljepljivu traku.
3. korak: Uklonite dva vijka.
4. korak: Odvojite kućište od unutarnjih komponenti.
5. korak: Uklonite sve vijke i odvojite dijelove okvira.
6. korak: Uklonite gumu i odspojite dva konektora, zatim odvojite PCB od tijela uređaja.
7. korak: Uklonite bateriju i zbrinite ju u skladu s lokalnim propisima.

Potvrda o sukladnosti

CE


⚠ Oprez

Uređaj upotrebljavajte samo s duhanskim umetcima za grijanje osmišljenima za lil SOLID. Duhanski umetci za grijanje prodaju se odvojeno. Uređaj se ne smije prodavati maloljetnim osobama.

lil, lil SOLID, lil SOLID Ez žigovi su u vlasništvu KT&G Corporation koje, pod licencom, koristi Philip Morris Products S.A.

IQOS je žig u vlasništvu Philip Morris Products S.A.

1. Name and component of each part

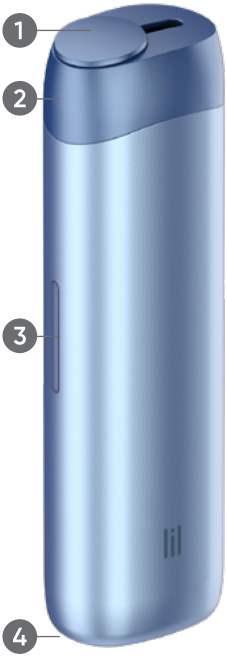


Cover of stick insertion part



Cap



Button
(Status LED light)

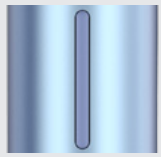

Charging Port



Button (Status LED light)

By pressing the Button or once the device is plugged into a power outlet through the Charging Port, the charging status of the device is displayed.

When the device is being charged, the Status LED lights.

- The Status LED blinks while the device is being charged.
- The Status LED stays on with blue after the device is fully charged.

Blue 100~75%
Ice Blue 75~35%
Orange 35~1%
Red needs to be charged

* Due to the nature of the parts used for the Status LED, the brightness and color of the LED light may vary slightly.


Charging Port

- Charge the device before your first use.
- Takes approximately 2 hours to be fully charged, available for use for approximately 25 sticks (the number of sticks can vary according to the use environment).

⚠ Only use the USB Cable and AC Power Adaptor designed for lil™ that come with your device.

⚠ You may charge the device whenever it is convenient regardless of the battery charge status.

2. Box Contents

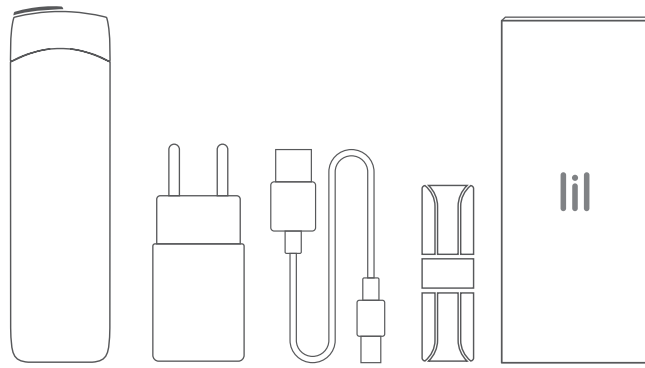

lil SOLID Ez™ Device | AC Power Adaptor | USB Cable | Dual Cleaner | User Kit (User Guide, Safety Warnings and Instructions and Warranty)

3. Safety Warnings and Instructions

Read all instructions in this User Guide carefully before use to operate the device in a safe and correct manner.

The Safety Warnings and Instructions discussed in this User Guide cannot cover all possible situations that could occur during the use of the device. Caution and care must be exercised when using or maintaining an electronic device.

Keep these safety warnings and instructions for future reference as they contain important information.

⚠ Failure to follow these instructions may result in personal injuries.

Device electronic and battery

- Do not use the device with its Cap removed and do not attempt to touch the heater tip.
- Be careful not to drop the device in water.
- This product contains no

user-serviceable parts. Do not attempt to open, modify, disassemble or repair the battery or any component of this device.

- If the device appears to be damaged, modified, disassembled, tampered with, or immersed in liquid, do not activate the device.
- Do not touch the device, AC Power Adaptor and USB Cable if they overheat, fume, ignite, spark or burn.
- Do not use the device if it has been exposed to excessive heat.
- Do not connect the device through electric wires or other metallic materials. Doing so may cause damage.
- Do not use the device where flammable materials, liquids or gases are present, or under conditions with

high oxygen supply. Doing so presents an explosion hazard.

- Device, AC Power Adaptor and USB Cable should not be exposed to any liquid, oils, solvents, etc. Do not touch the device or its parts if it becomes wet or has been immersed in liquids, oils, solvents, etc.
- Do not clean the device using liquids, oils, solvents, etc.
- Caution must be exercised so that foreign materials do not enter the stick insertion part. Do not use device unless foreign particles have been removed.
- If any fluid leaking from the device comes in contact with skin, wash the affected area, including hands and do not touch eyes. In case

any fluid comes in contact with eyes, immediately flush with clean, running water for at least 15 minutes and seek medical attention.
- Do not use the device if battery is leaking.
- Only use USB Cable and AC Power Adaptor designed for lil. See the Technical Data section of this User Guide for approved Power Adaptor models. Do not use other cables and power adaptors - doing so may result in damage.
- Charge the device indoors only, as indicated by symbol .

Use and storage

- Only use tobacco sticks specifically designed for lil SOLID™ device. The performance of the device

is not guaranteed if you use it with other consumables.

- Do not modify tobacco sticks in any way or add any substance to tobacco sticks. Doing so may cause injury.
- Keep device, USB Cable, AC Power Adaptor and tobacco sticks out of reach of children and pets at all times. Caution: Parts may be swallowed by children.
- This device is intended for adult-use only. Children and minors should never use the device under any circumstances.
- The device and tobacco sticks are prohibited for sale to minors.
- The device and tobacco sticks are intended for use by current adult smokers who would otherwise

continue to smoke.

- Do not remove Cap while device is in use or immediately after use as device may be hot. Allow for device to cool before removing Cap.
- Even if the tobacco stick is removed during use, the heating process continues. To stop it, turn off power by pressing the Button for 2 seconds.
- Clean the device after cooling.
- Only use Cleaning acces sories designed for lil SOLID. Do not use other Cleaning accessories - doing so may result in damage.
- After removing the tobacco stick from the device, do not touch the tobacco portion of the stick as it will be hot after use.

- Handle the device with care. Do not drop this device or subject it to strong shock.
- Storing the device in places with high temperatures (such as inside a vehicle or near heat sources such as radiators or fires), high humidity or low temperatures, may reduce battery performance.
- Device battery will deplete if left unused for an extended period of time. Recharge the device before use.
- The device is recommended to be used in ambient temperatures between 0 °C and 40 °C.
- Tobacco sticks specifically designed for lil SOLID device are single-use. Do not re-insert a used stick into the device. The performance of

the device is not guaranteed if used sticks are re-inserted.

- The tobacco stick should never be lit with a match, lighter, or any other flame source.
- Tobacco sticks may show spots or discoloration after normal use.
- Do not insert the device in your mouth.
- Do not operate the device where use of electronic devices is prohibited.
- This device is not intended for use by persons with reduced physical, sensory or mental capabilities or lack of knowledge unless they have been given supervision or instruction to use the product in a safe way and understand the hazards involved.

- Being exposed to sweat, UV rays and chemicals in a repeated manner may discolor the device exterior.
- Proximity to magnetic field may cause malfunction.

Tobacco and nicotine

- Tobacco sticks contain nicotine, which is addictive. Nicotine is naturally present in tobacco used in tobacco sticks.
- Swallowed tobacco sticks can pose a risk of nicotine intoxication. If tobacco sticks are swallowed, seek medical attention immediately.
- The best way to reduce tobacco-related health risks is to quit tobacco and nicotine use altogether.
- Stopping smoking cigarettes or switching to other

nicotine-containing products may require the adjustment of the dosing of certain medicines (e.g. theophylline, clozapine, ropinirole).

- Using nicotine-containing tobacco sticks may cause side effects such as headache, nausea, throat irritation, or stomatitis. If you experience these symptoms, stop use of the product immediately.
- If you are pregnant, think you may be pregnant, or are breastfeeding, or have heart disease, diabetes, epilepsy, seizures or other serious conditions, you should quit tobacco and nicotine use altogether and consult a health care professional.
- Use of tobacco sticks may cause an allergic reaction.

Seek medical attention immediately if you experience any of the following symptoms: swelling of the face, lips, tongue, etc., and/or difficulty breathing.

⚠ CAUTION
< Thermal Burn Risk >

Failure to follow these Safety Warnings and Instructions could result in thermal burns:


- Store lil SOLID and tobacco sticks in a clean, dry, and cool place.
- Do not expose lil SOLID and tobacco sticks to high humidity conditions or direct sunlight.
- Do not use tobacco sticks that have been exposed to excessive heat or moisture.
- Do not remove tobacco stick while in use.

Reporting of adverse events or incidents


- If you experience any un wanted health effect when using the device, consult a health care professional.
- You can report any adverse event or incident directly by contacting Customer Service Centre at 0800 9153.
- By reporting side effects, you can help provide more information on the safety of this product.

4. Use


1 Steps before use

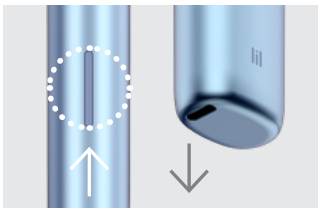

The device is in the sleep mode and does not operate unless activated for your first use. To wake up the device press the Button for 2 seconds or connect the charger to the charging port.

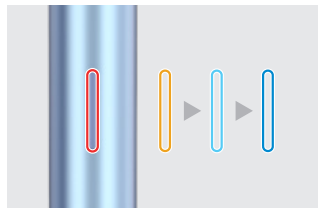

While the device wakes up, the Status LED blinks twice in red, orange, ice blue and blue, sequentially.

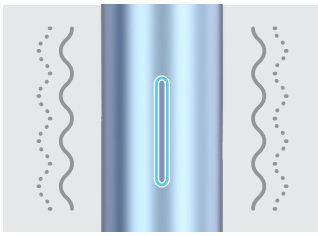

Once the device is activated, the Status LED blinks in ice blue for one second and vibration occurs twice, simultaneously.


To conserve battery life, the device will return to sleep mode:

① if it is not charged for 24 hours when the Status LED light is red.

② if it is not used for 7 days when the Status LED light is orange, ice blue, or blue.




Get your device.
Slide and open the Cover of the stick insertion part at the top of the device.

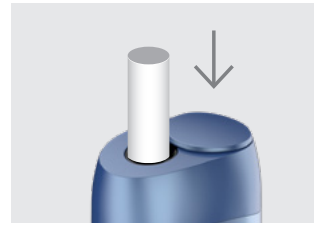


Insert a tobacco stick designed for lil SOLID into the stick insertion part with the tobacco part facing down and press the stick in until it touches the bottom of the stick insertion part.

- If you insert the stick upside down, the device can break down during use. Please check the insertion direction of the stick before use.
- Close the cover of the stick insertion part when the device is not in use to prevent any substances from getting inside.

2 Start device

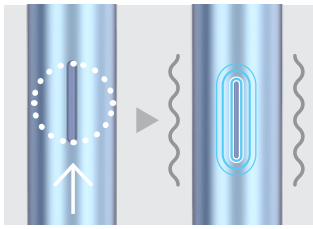


Press the Button for 2 seconds until vibration occurs. After 2 seconds, the Status LED blinks in ice blue, and vibration occurs simultaneously.
Preheating will last for about 25 seconds. The duration time of the preheating process can vary according to the use environment.

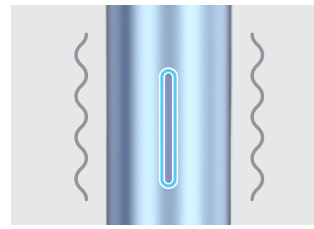


When the preheating process ends, the Status LED lights come on, and vibration occurs simultaneously.
This means that the preheating process has ended, and the stick is ready for use.


3 Use

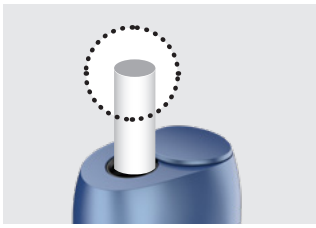

The device with tobacco stick is ready to use. You have up to 14 puffs or 5 minutes, whichever comes first.

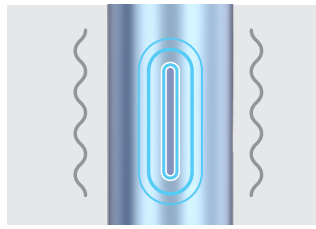

To signal the last 30 seconds of the session or the last 3 puffs, whichever comes first, the device will vibrate once and the Status LED will blink in ice blue until the end of the session.

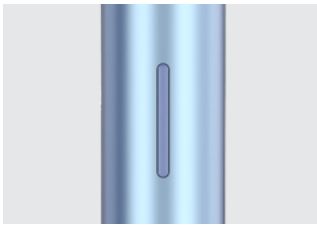


When the session comes to an end, the Status LED and the device turn off automatically. You do not need to press the Button.

Press the Button for 2 seconds and remove the tobacco stick only if you want to stop the session and the use of the device.

4 Removing the tobacco stick



Rotate the stick to one direction 3 times or more.

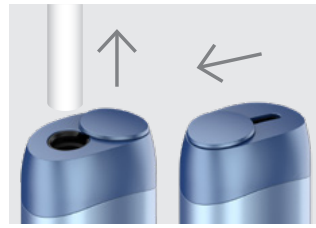

Pull the stick out the device.
Close the Cover of the stick insertion part.


If a stick is not removed as described above, the remnants of a used stick may remain inside.
If there are some remnants inside the stick insertion part, refer to **1** of **6. Troubleshooting**.

5 Consecutive uses


For consecutive use, please repeat the above **1** - **4** steps.
May use up to 3 consecutive uses.

5. Cleaning and handling


1 Cleaning with the Dual Cleaner

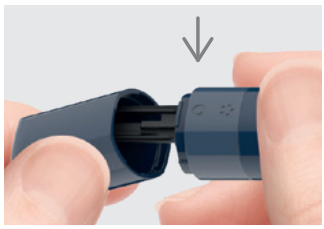


Grab the Dual Cleaner. To use the Cleaning Wiper, gently snap open the side with the ⦿ mark.

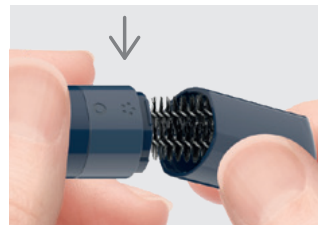

To use the Cleaning Brush, gently snap open the side with the ⁘ mark.

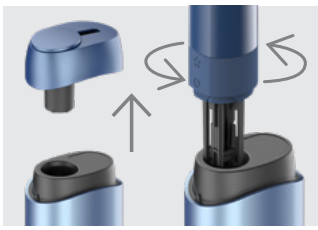


Remove the Cap from the device.
Insert the Cleaning Wiper into the device and clean the device by spinning the Cleaning Wiper.

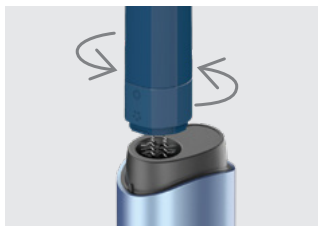


Insert the Cleaning Brush into the device and clean the device by spinning the Cleaning Brush.

* We recommend cleaning the device after using 20 sticks for optimum performance of the device.
* Do not clean the device during heating or right after the use of the device. Let the device to cool down, otherwise the Cleaning Wiper or the Cleaning Brush can melt and stick to the device.
* Take care not to let the Cleaning Wiper or the Cleaning Brush come into contact with any liquid, oils, solvents, etc.
* Take care not to let the Cleaning Wiper or the Cleaning Brush come into contact with eyes.
* Keep the Cleaning Wiper or the Cleaning Brush away from fire.
* Caution should be exercised when using the Cleaning Wiper and Cleaning Brush as they can be sharp.
* Use of other cleaning tools aside from Cleaning Wiper or Cleaning Brush or using excessive force may damage the heater.

2 Cleaning with heat

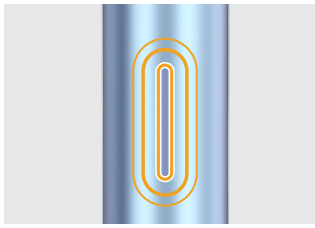

Quickly press the Button 5 times (within 2 seconds). The Status LED blinks in orange, for 90 seconds, and the cleaning process proceeds automatically.

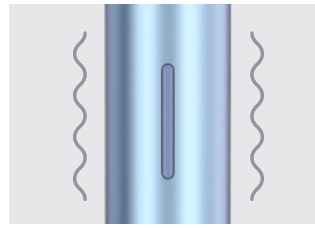

When the cleaning process ends, the Status LED automatically goes off, and vibration occurs 2 times.

* Cleaning with heat means heating the remnants stuck to the heater. The heater can get very hot, so do not let anything come into contact with the heater during or immediately after cleaning with heat.

6. Troubleshooting

1 I cannot insert the stick into the device.

If there are remnants from the previous stick inside the stick insertion part, a stick may not be inserted. Remove the remnants by pulling the Cap out of the device and try to insert the stick again.




Check for any remnants inside the stick insertion part. If there are remnants of a used stick, remove the Cap from the device.




Remove the remnants from the Cap.


2 My device does not work.

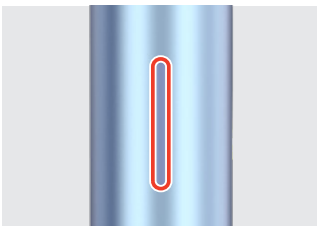

Status LED lights in red for 3 seconds and vibration occurs 2 times, simultaneously.
The battery is insufficient.
→ Charge the device.

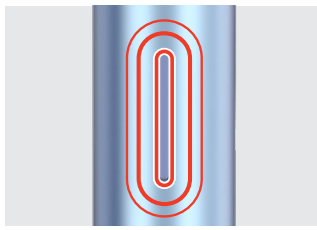


Status LED blinks in red 5 times. The device is malfunctioning.
→ Reset the device.

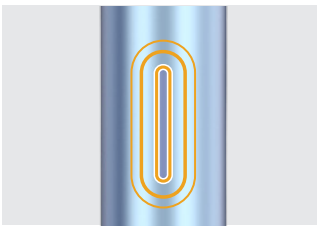


Status LED blinks in orange for 3 seconds. After 3 consecutive sessions the device will cool down automatically.
→ Please wait until the device temperature is stabilized.

* For your safety, the device cannot be used more than 3 times within 18 minutes as it needs to cool down. It will take 3 minutes and 30 seconds before you can have another session.


3 How can I reset the device?

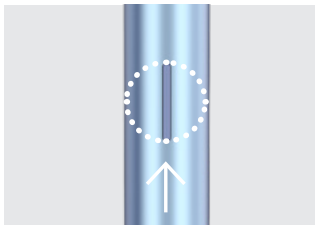

Press the Button for 8 seconds, even if vibration occurs within 2 seconds.

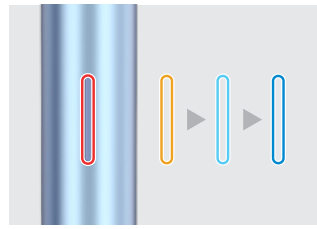

The device is reset, and the Status LED blinks twice in red, orange, ice blue and blue, sequentially.

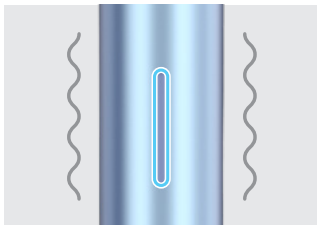

When the device is completely reset, the Status LED lights in ice blue for 1 second, and vibration occurs twice, simultaneously.

4 The duration of using the stick is too short.

The device is designed to provide up to 14 puffs or 5 minutes, whichever comes first.
The warranty period for the device is one year, subject to the terms and conditions described in the warranty.

7. Disposal

This symbol on the product or on its packaging indicates that this product and its individual parts



(including batteries) must not be disposed of with your other household waste. Instead, it is your responsibility to dispose of your waste equipment by handing it over to a designated collection point for the recycling of waste electrical and electronic equipment. Amongst others, waste batteries can be returned free of charge at the point of sale.

The separate collection and recycling of your waste equipment (including batteries) at the time of disposal will help to conserve natural resources and ensure that it is recycled in a manner that protects human health and the environment. Disposing waste equipment as unsorted municipal waste (e.g. by waste incineration or land filling) can have negative effects on the environment and human health. For more information about where you can drop off your waste equipment for recycling, please contact your local city office, your local household waste disposal service or the shop where you purchased the product.

8. Warranty

CUSTOMER CARE

Croatia
Freephone: 0800 9153
E-mail: contact.hr@iqos.com
Website: www.iqos.com/lil
Address: Philip Morris Zagreb d.o.o.,
Heinzelova 70, 10000 Zagreb

Warranty Period

- The duration of this product warranty on lil SOLID Ez device, AC Power Adaptor and USB Cable is 12 months from the date of purchase.
- In the absence of the proof of purchase, the

company reserves the right to voluntarily apply the warranty duration starting from the manufacturing date of the product in question based on its own records.

Warranty Coverage

- The company will, at its option (but without affecting your statutory rights), repair or replace any components which are defective in terms of material or workmanship when used in accordance with the associated lil SOLID Ez User Guide and which are subject to a valid warranty claim.
- If repair is not possible, replacement will be provided with a product of equivalent functionality. To the extent permitted by local law, the replacement color and/or model are subject to such color and/or model availability. In case of replacement of the product under this warranty, any replacement part becomes your property and the replaced part becomes the property of the company or entity which makes the exchange.
- The provisions of this warranty are only valid in the country of purchase.

Exclusions to warranty

Products with expired warranty or damaged by consumer negligence are excluded from the warranty service.
The following are excluded from the terms of this warranty:

a) malfunction damage caused by normal wear and tear elements;
b) cosmetic damages (such as scratches, dents, broken plastic, etc.) that do not impact the functionality of the product;
c) damage caused by misuse, abuse, accidents, unsuitable operating environment, natural disasters, power surge, contact with liquids or fire;

d) malfunction due to use with non-compatible consumables, power adaptor or cable;
e) damage or malfunction caused by attempt to open, modify and repair, either by a user or by a service provider not accredited by the manufacturer;
f) damage or malfunction caused by failure to use as described in the associated lil SOLID Ez User Guide;
g) normal battery performance depreciation, unless battery failure has occurred due to a defect in materials or workmanship;
h) devices containing fully or partially non genuine parts;
i) loss or theft of the product or its parts.

Claim under warranty

To make a claim under this warranty, please contact your Customer Service Centre number below for assistance or visit one of our stores. It is recommended to have a proof of purchase when making a warranty claim.

Other

Under no circumstances is the company liable for any personal or third-party claims for damages related to the use of the product besides the ones mentioned in this document.

This limitation does not apply for cases where the company is liable towards you under law.

The rights conveyed under this warranty are in addition and without prejudice to all rights and remedies provided by consumer protection laws in the country of purchase, which includes rights in case of liability due to material defects of goods. In EU member states buyers are entitled by law to rights in case of liability due to material defects of goods and remedies from the seller free of charge, at least two years, in respect to any defect existing at the time of delivery.

9. Technical Data

lil SOLID Ez

Model: S-MONO-V11
Battery type: Li-ion rechargeable battery
Input: 5.0V ⎓ 2.0A

The lil SOLID Ez is marked with the symbol [⊐□⊏] followed by "xx-1007EMTx", which indicates that lil SOLID Ez can only be charged using the approved Power Adaptor models designed for lil.

AC Power Adaptor

Model: HM-1007EMTE
Input: 100-240V~ 50-60Hz 0.35A
Output: 9.0V ⎓ 1.67A or 5.0V ⎓ 2.0A
Output power: 15.0W or 10.0W
Average active efficiency: 86.15% or 82.95%
Efficiency at low load(10%): 81.05% or 80.00%
No load power consumption: <0.07 W
Compatible with all lil SOLID devices

USB Cable

Compatible with all lil SOLID devices

Dual Cleaner

To find out the month and year of manufacturing of the lil SOLID device you should call the Customer Service Centre and tell the 14-digit alphanumeric code placed under the cap of the device.

Storage conditions: in dry, conditioned premises, temperature regime: from 5 °C to 30 °C relative humidity less than 70%.

Customer Service Centre: 0800 9153

BATTERY REMOVAL INSTRUCTIONS (FOR DISPOSAL AND RECYCLING)

Battery must not be removed by the consumer. At the end of product life, only an authorized recycler may safely remove battery by using the following steps.

Model S-MONO-V11

Step 1: The device should be fully discharged before disassembling it.
Step 2: Detach the lower plate at the bottom side with a tool, and then remove the adhesive tape.
Step 3: Remove 2 screws.
Step 4: Disassemble the housing from the internal components.
Step 5: Remove all screws and detach Frame Parts.
Step 6: Remove rubber and disconnect 2 connec tors, then detach PCB from the device body.
Step 7: Remove the battery and dispose of it according to local regulations.

Confirmation of Compliance

CE

⚠ Caution

Only use this device with tobacco sticks designed for lil SOLID.
Tobacco sticks are sold separately.
This device must not be sold to minors.

lil, lil SOLID, lil SOLID Ez are trademarks owned by KT&G Corporation and used under license by Philip Morris Products S.A.
IQOS is a trademark owned by Philip Morris Products S.A.